


## Steering Wheel Replacement

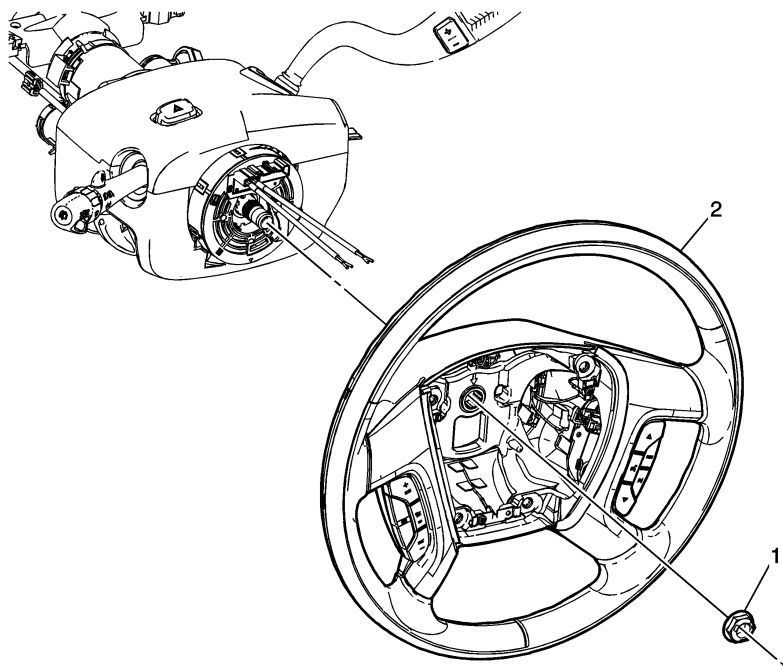

Callout	Component Name
<p><b>Caution:</b> Refer to <a href="#">SIR Caution</a> in the Preface section.</p>	
<p><b>Preliminary Procedure</b></p> <p>Remove the inflatable restraint steering wheel module. Refer to <a href="#">Inflatable Restraint Steering Wheel Module Replacement</a> .</p>	
<p>1</p>	<p>Steering Wheel Nut</p> <p><b>Notice:</b> Refer to <a href="#">Fastener Notice</a> in the Preface section.</p> <p><b>Tighten</b> 41 N·m (30 lb ft)</p>
<p>2</p>	<p>Steering Wheel</p> <p><b>Procedure</b></p> <ol style="list-style-type: none"> <li>1. Disconnect any electrical connectors as needed.</li> <li>2. Loosen the steering wheel nut until two to three threads are left engaged.</li> <li>3. Wiggle the steering wheel until it disengages completely.</li> <li>4. Remove the steering wheel nut and steering wheel.</li> </ol>