

PROCEDURE FOR PROGRAMMING REMOTE TRANSMITTERS

Important note: all transmitters must be programmed in a single programming sequence. When using this program method, all previously programmed transmitters will be erased upon the receipt of the programming signal from the first transmitter.

The order in which the transmitters are programmed will determine their numbering position within the PDM memory. The first transmitter programmed will be transmitter #1, and the second transmitter programmed will be transmitter #2. The number stamped on the transmitter case is for reference only; #2 can be programmed as #1, or vice versa. Additional unnumbered transmitters (up to a total of four) can be programmed.

1. Close all the vehicle doors.
2. Insert the ignition key into the ignition lock cylinder.
3. Press and hold the door unlock switch. While holding the door lock switch in the unlock position, cycle the ignition twice - ON, OFF, ON, OFF.
4. Release the door unlock switch. The doors will lock and unlock to confirm that the programming mode is active.
5. On the transmitter, press and hold the LOCK button and the UNLOCK button simultaneously. After a delay of approximately 15 seconds, the doors will lock and unlock to confirm the programming of that transmitter.
6. Repeat step #5 as necessary to program up to 4 transmitters.
7. Turn the ignition switch to the RUN position in order to exit the keyless entry transmitter programming mode.
8. Operate the transmitter functions in order to verify correct system operation.